

JOURNEY 14 PANEL QUICK START GUIDE

1

OPS Installation




(If you do not have an OPS, you may skip the following step)

Install the OPS by the following steps:

1. Insert the OPS into the special slot on the rear of the interactive panel.
2. Tighten the screws.
3. Confirm that the OPS is installed correctly.

Note: The OPS does not support hot-plugging. Please insert the plug of the OPS after the interactive panel is disconnected from the power.

2

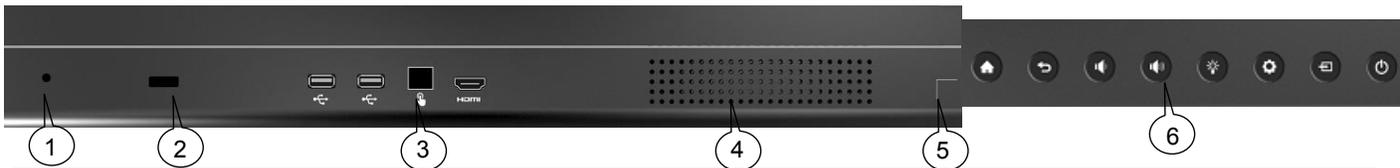

Item	Icon	Function Description
1		Brightness sensor: Auto adjust brightness according to the environment
2		Remote control receiving, effective receiving area $\approx 3m \leq 30^\circ$, or $\leq 5m$ vertical.
3		Android/PC USB port*2 auto switch (Do not switch the signal source if the usb flash drive is writing.)
		Touch Port, designated for Front HDMI port
		HDMI port used to connect an external display device
4		Front Speakers
5		Magnetic pen holder
6		Enter/Return to Android home page
		Return to previous interface
		Decrease volume
		Increase volume
		Enter ECO mode to turn off the display
		Enter/Exit Setting menu
		Enter/Exit signal source menu
		Power button: On or standby mode

3

Turn on System

Power Indicator: At the bottom right hand side of your panel frame there is a series of buttons. The first button on your right is the power button. When powered on, the indicator light will turn green.



4

Android Home Page

Inputs

Long press corresponding App to delete it from home

Click Triangle for shortcut to settings



Lock: Set screen lock password.
Settings: Click to enter the Android settings interface.

Capture: Screen Shot.

Browser: Chrome Browser

Application: App Drawer

Annotate: Enable annotation software.

Input: Select other display inputs.


Tasks: Open/Close running apps.

5


Renaming Inputs of Home Screen



Step 1 - Click Input

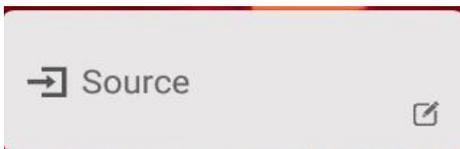

Step 2 - Click Edit Button

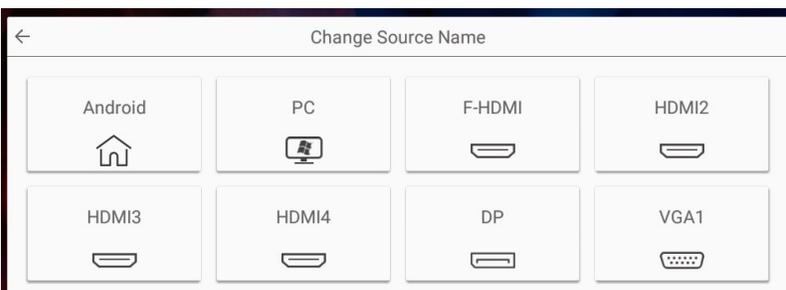

Step 3 - Choose Input name to rename then save.

6


Android Settings



1. Customize common functions such as start up/shutdown, user accounts, and wallpaper
2. Configure Wifi/Lan Settings
3. Manage Applications
4. Storage Summary
5. Set date/time
6. Set language
7. Factory Reset
8. Device Information

7

Startup and Shutdown

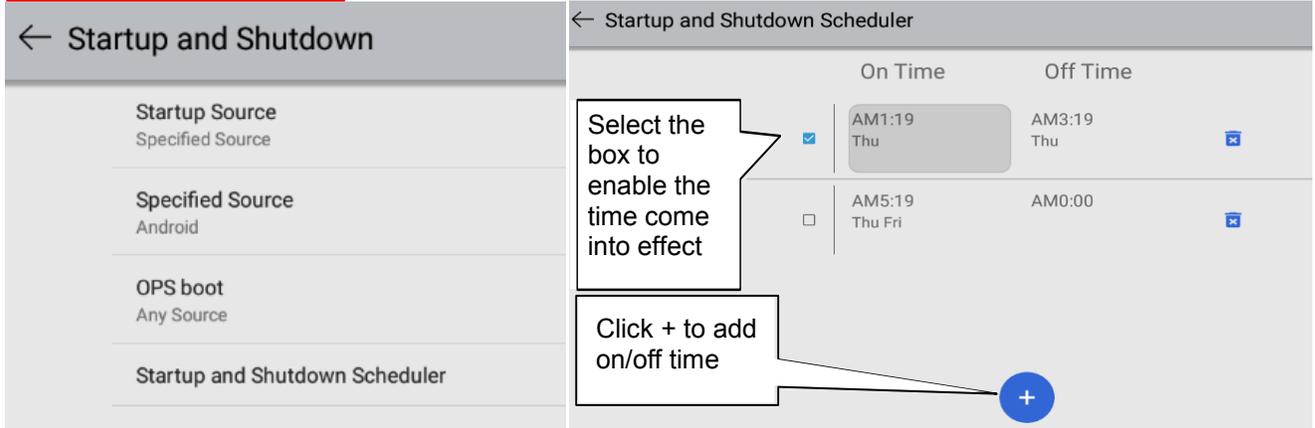

8

System Help

Tap the floating circle to move or hide it.
Click the center of System Help to unfold 5 shortcuts.



- **Home:** Return to Android home page.
- **Mem Clear:** Clear memory to speed up memory.
- **Check:** Click to check system status like Network status, OPS status, touch status and etc.
- **A-Lock:** Set password for apps. User only enters password to enable the app.
- **S-Lock:** Set screen lock password or patterns.

9

Whiteboard Annotation

Whiteboard is an annotation software pre-installed in the Journey panels.



Switch between whiteboard main interface, desktop mode, and overlay annotation.



Pen Eraser Select Undo Redo More Hide Clear



Slide Management




Save As QRcode Send Background Insert Pic Close App

10

Eshare App



EShare is a cross-platform screen sharing tool for smart phones, computers and tablets.

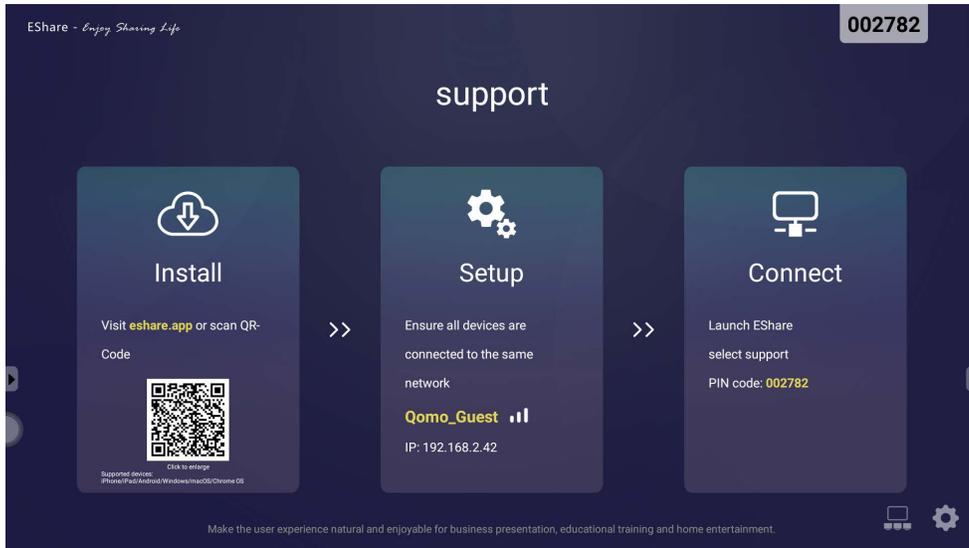

Adjust Eshare Settings


1. Install Eshare on device such as computer or cell phone by visiting eshare.app or scanning the qr code on the panel.
2. Open Eshare Pro from the app drawer.
3. Ensure all devices are connected to the same WIFI network.
4. Launch Eshare on device and select eshare name shown on the panel.

11

Downloading Apps

Visit the Google Play Store to download applications for the Journey 14 panel.

Microsoft apps preloaded in Journey 14 Panel

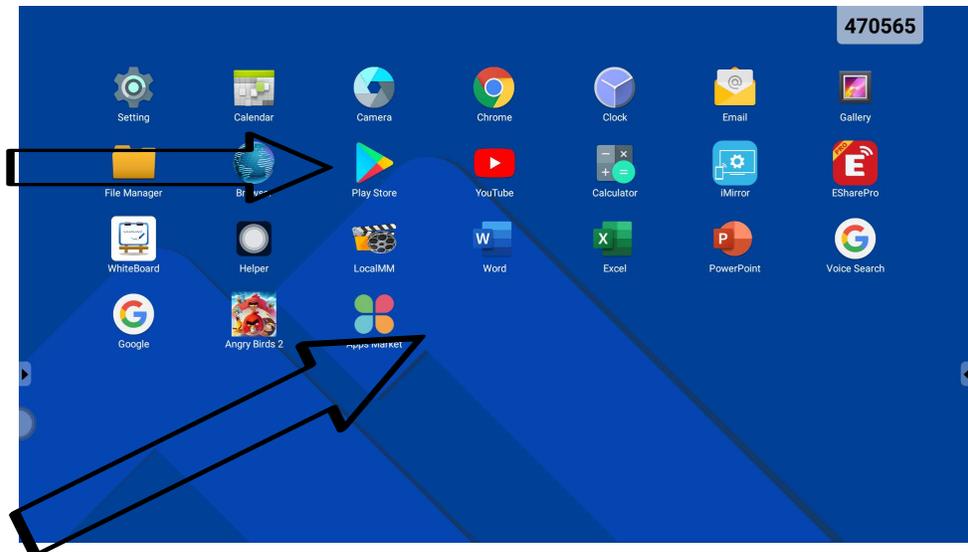


12

Connecting Devices


For safety, please do not connect any power supply before the external devices setup.

1. Connecting Your External Computer

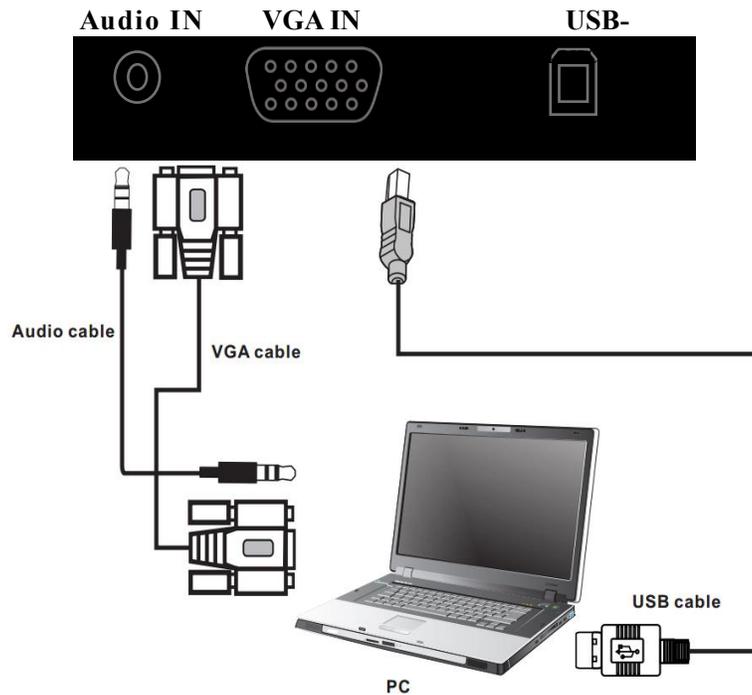


Connect your computer using a USB touch cable, VGA Cable and Audio Cable, HDMI Cable or DP Cable.

2. Outputting Display

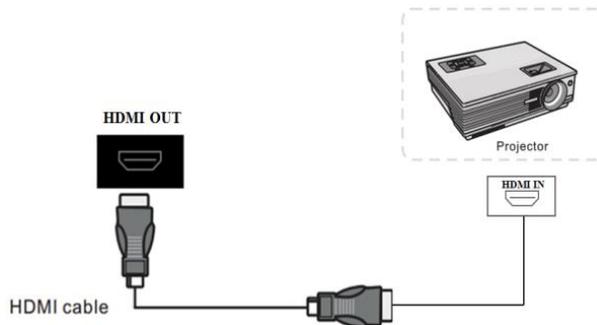

You can output your Journey 14 panel to other displays through the HDMI port.

3. AV Connecting(HDMI IN)

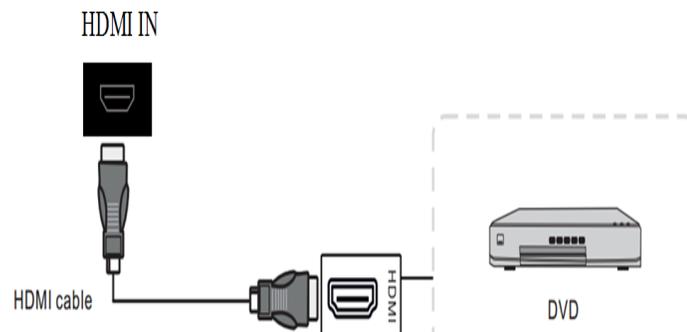

Connect other external devices to the panel such as a DVD player or Camera using the HDMI port.

ENJOY YOUR JOURNEY

For Additional Help

Contact us at support@qomo.com

or 248-960-0985

Visit us at www.qomo.com for training videos and more!