presen**station** 800f1 Quick Guide

INTERACTIVE PODIUM MONITOR MODEL: QIT800F1



Part Name and Function Introduction



Part No.	Part Name	Function Description
1	Display screen	Screen display area / electromagnetic handwriting
		area/ Capacitive screen touch area
2	Function buttons	Includes touch on/off, volume up and down, menus, and
		power buttons
3	Indicator light	Green: Working mode / Red: Standby mode
4	Speakers	Stereo Audio
5	Stand	Adjustable stand
6	Power input	DC12V power port
7	HDMI IN	HDMI input
8	Туре с	Full function type c
9	Touch	Touch input and USB 3.0 data interface
10	USB	USB 3.0 expansion port
11	HDMI out	HDMI output
12	Cord threading hole	Fixed electromagnetic pen cord

Function button details

j.	Touch on/off	Click to enable or disable capacitive touch. In the OSD menu, this is the return function key.
	Volume up and down	Click Increase or decrease volume. Long press to continuously increase or decrease the volume. Holding the volume up and down buttons for 3 seconds at the same time will disable/enable all button functions.
。。。 000	Menus	Go to the OSD menu.
Ċ	Power	Press and hold for 3 seconds to power off and short press to power on.

How to connect your device

- 1) Connect the computer to the HDMI IN port on the tablet using an HDMI cable.
- 2) Next enable touch control by connecting the computer to the touch port using a USB A-B cable. The USB Type-B (square port) connects to the tablet.
- 3) If your device has a full-featured C port, you can connect it to the device's type c port with a single cable for video, touch, writing, and data connectivity.
- 4) To share the monitor screen to large format displays and projectors, connect the HDMI-OUT ports on the tablet to the HDMI-IN ports on your desired displays.
- 5) Connect the power adapter to the tablet and plug it into a wall port to turn the tablet on.
- 6) Use the USB extender ports to connect a mouse, keyboard, or thumb drives.

Drives

Visit qomo.com/qit800f1 for a mac or windows driver.

Getting Started Tutorials

For helpful tutorials on using your new PresenStation interactive tablet go to qomo.com/get-started and qomo.com/tutorials.

Important Reminders

1. This product is suitable for general applications including handwritten editing of documents as well viewingmultimedia content, QOMO does not reccomend useage of this product in the outdoors.

2. Please use the accessories supplied in the package. Our company does not provide free support for damage caused by accessories not certified by QOMO.

3. To avoid electrical shock or fire do not touch the power cord with force or get wet.

4. Only use grounded outlets, as to avoid electric shock and equipment damage.

5. Do not place any flammable or explosive items such as candles, insecticides or cigarettes near this product.

6. Do not allow any heating device to be near the power cord, the aging of jacket may result in electric shock or fire.

7. Do not install this product in a poorly ventilated place such as a bookcase or a wall cabinet, because the high temperature may cause a fire.

8. Do not use a non-standard display holder, to avoid injury.

9. Do not spray liquid such as detergent directly onto the display, to avoid damage, electrical shock or fire.

10. Unplug the power cord before cleaning the product.

11. Do not open the back cover to avoid electric shock or fire. This product can only be repaired by an agent authorized by QOMO.

12. Do not place this product in a place with oil, smoke, or moisture, or install it, to avoid failure, electrical shock or fire.

13. Please unplug the power cord during storms or lightning Addionally if the devicewill not be used for an extended period of time.

14. If the display has been used for a long period of time, black or uneven spots may appear on its surface. If this begins to happen, make sure to turn off the display periodically to extend its working life.



www.qomo.com 1-866-990-7666 support@qomo.com