

WanderBoard 32 Quick Start Guide

1




Turn on System

Power Indicator: At the back bottom left hand side of your panel there is a series of buttons. The first button on the left is the power button.

2

General

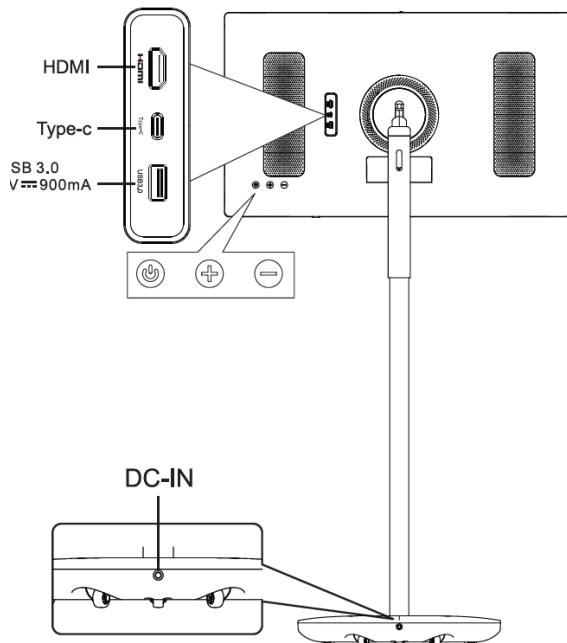

1. Power (hold button 7 sec)/Google Gemini (hold button 2 sec)/(short click) standby mode
2. Volume
3. Inputs: HDMI, USB C, USB
4. Remote control signal receiver
5. Camera and Camera Switch
6. Speaker
7. Charging Port
8. Wheels

3


Accessories

- Remote Control
- Remote Control Tray
- Power Cord & Power Adapter
- HDMI Cable x 1
- User Manual
- AAA Batteries

4

Remote Control

**When the wanderboard 32 is turned on for the first time it will prompt you to pair the remote with it*

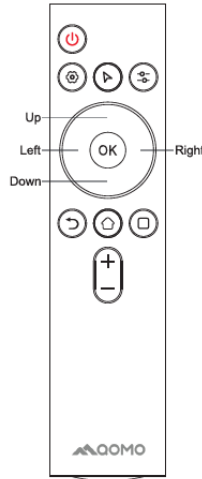

Description of Control Keys on the Remote Control

- ⏻ - In screen-off mode, press ⏻ button to turn on the product,
- During normal working, press ⏻ button to enter screen-off state;
- Press and hold ⏻ button to enter the preset screen. (From the drop-down menu on screen, click "⚙️ > System > Gestures > Press & hold power button", then click "Power menu" or "Digital assistant" to set functions of "Press & hold power button" as needed)
- ⚙️ Open the Settings menu.
- 🖱️ Enable or disable the mouse function.
- ⌵ Open the drop-down menu.
- Up/Down: simulate swiping the screen up/down.
- Left/Right: simulate swiping the screen left/right.
- OK Press OK button to confirm the operation.
- ⏪ Go back to the previous menu.
- 🏠 Go back to the home page.
- 📄 Enter recent mission.
- + Increase the volume.
- Decrease the volume.

5

Android Home Page



1. Date & Time
2. Google Search Bar
3. Voice & Image Search
4. Wifi and Battery Status
5. Short Cut Apps
6. Control & Notification Center (Swipe Down)
7. Settings

6


Customize Home Screen

Click app from apps page, hold, drag to add or remove apps.
Click and hold opp to add widget



7

Settings

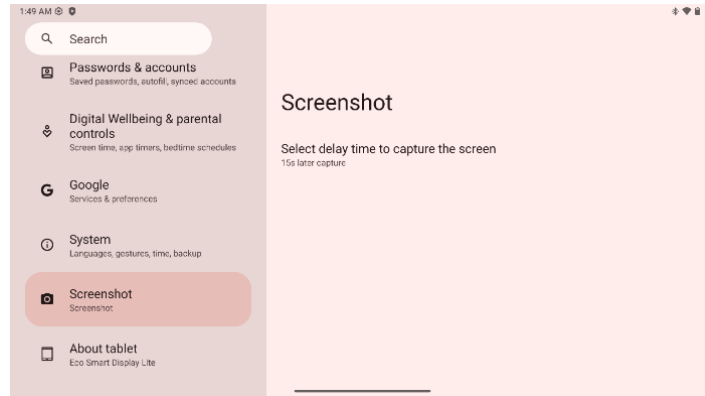

1. **Network & internet:** Set up wifi network, ethernet
2. **Connected devices:** Set up external camera and microphone, bluetooth pairing
3. **Apps:** App Management/preferences
4. **Notifications:** System/app notifications
5. **Battery:** Battery usage, Battery Saver, and Battery percentage
6. **Storage:** Check and Manage system storage
7. **Sound:** Do not disturb, notification sounds, tap & click sounds, alarm sound
8. **Display:** Different display options, lock screen, screen timeout, screen saver
9. **Wallpaper:** Wallpaper and Dark Theme Option
10. **Accessibility:** Different accessibility options such as display size and text
11. **Security & Privacy:** Lock screen and system security settings
12. **Location:** Location services settings
13. **Passwords & Accounts:** Passwords and synced account
14. **Digital Wellbeing & Parental Controls:** App usage data
15. **Google:** Google account settings
16. **System:** Language, time, gestures, updates, and system settings
17. **Screenshot:** Screenshot settings
18. **About tablet:** Device info, model, version

8

Gesture Controls

Under Settings→ System→ Gestures you can change the Launcher to the 3 button Android mode for back, home, and apps, or use the below gestures.

Go Back: Swipe inward from either the left edge or right edge of the screen

Go Home: Swipe up from the bottom of the screen.

Open Recent Apps: Swipe up from the bottom, hold, then release.

Switch Between Open Apps: Swipe left or right along the very bottom of the screen.

Close an App from Recent Apps: Open Recent Apps, then swipe up on the app card.


Open Notifications: Swipe down from the top of the screen.

Zoom In / Out: In supported apps, double-tap to zoom, or use two fingers to pinch open or closed

Show More Apps: Swipe up from anywhere on the screen except for bottom

9


Control & Notification Center

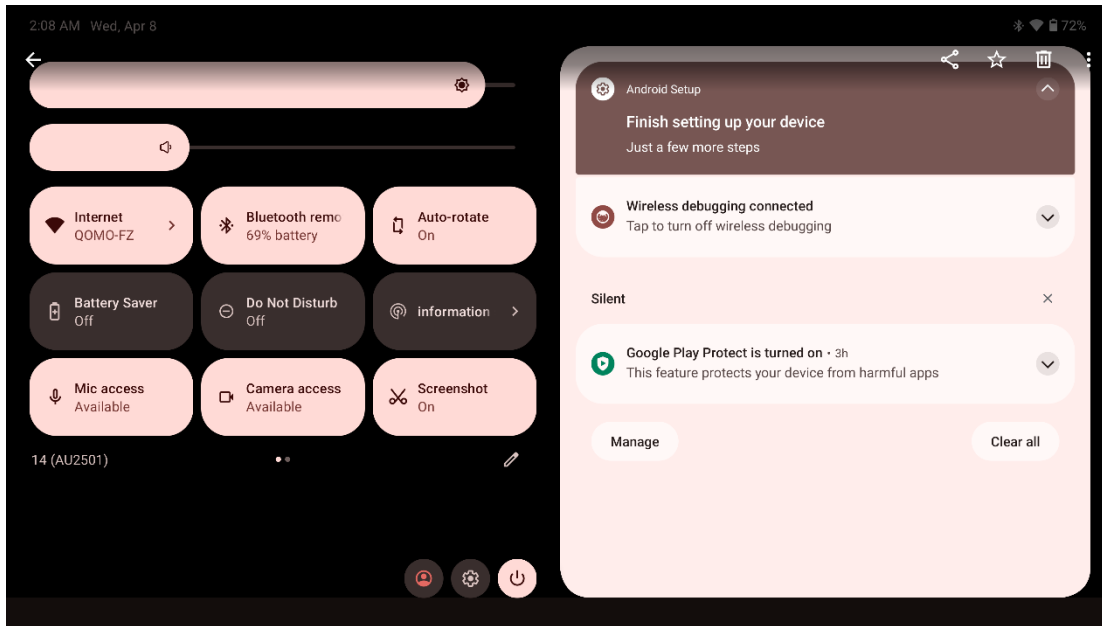

1. Internet: Quickly view and switch between available Wi-Fi networks and manage network connections.
2. Bluetooth remote: Display Bluetooth device connection status with battery percentage (69% battery shown) for paired remote devices.
3. Auto-rotate: Toggle screen auto-rotation on or off to control display orientation.
4. Battery Saver: Enable or disable battery saver mode to extend device battery life.
5. Do Not Disturb: Turn on/off do not disturb mode to mute unwanted notifications and sounds.
6. Information: Access quick device info or related system details
7. Mic access: Enable/disable mic access
8. Camera access: Enable/disable camera access
9. Screenshot: One-tap to trigger the device screenshot function
10. Settings (Gear Icon): Tap to directly enter the full system settings interface for advanced device configuration.
11. Power Button: Power off display
12. Notifications on right side

10

Recent Tasks

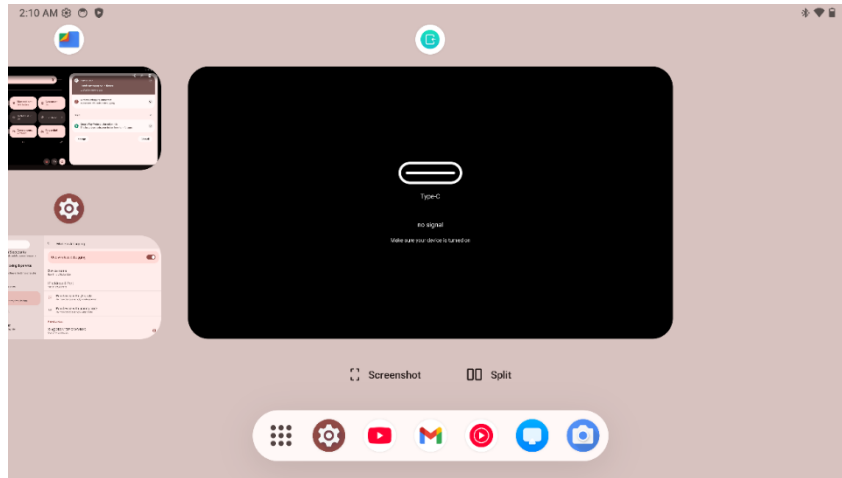


Swipe up from the bottom of the screen and hold to open the Recent Tasks interface. Here you can:

1. View all your recently used apps
2. Take a screenshot of the current app screen
3. Enter split-screen mode to run two apps simultaneously
4. Close individual apps or clear all recent tasks

11

Whiteboard

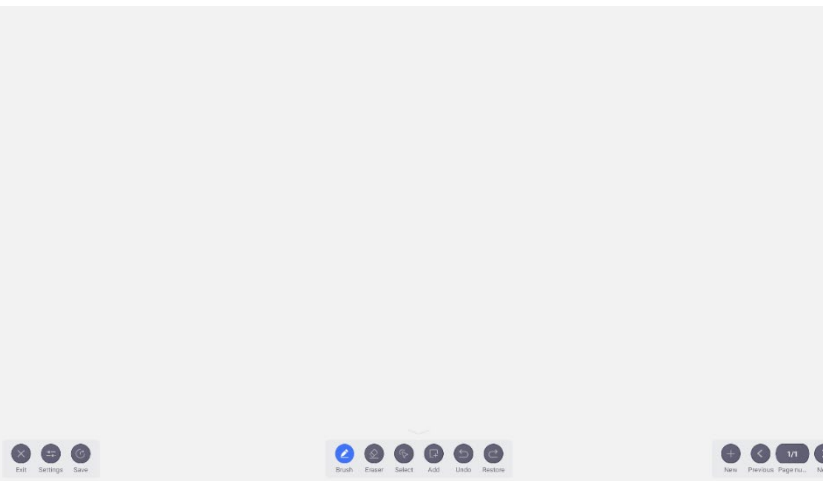

1 2 3

4 5 6 7 8 9


10 11 12 13

1. Exit: Close Whiteboard
2. Settings: Adjust brush settings, background color and plate style.
3. Save: Save as an image file
4. Brush: Change brush size and color
5. Eraser: Spot eraser and clear screen
6. Select: Select object
7. Add: Add images, flowcharts, shapes and smart shapes
8. Undo: Undo last action
9. Restore: Redo / Restore previous action
10. New: New page
11. Previous: Previous page
12. Page number: Current page / Total pages
13. Next: Next page

12


Connecting Devices

1. Wireless Casting

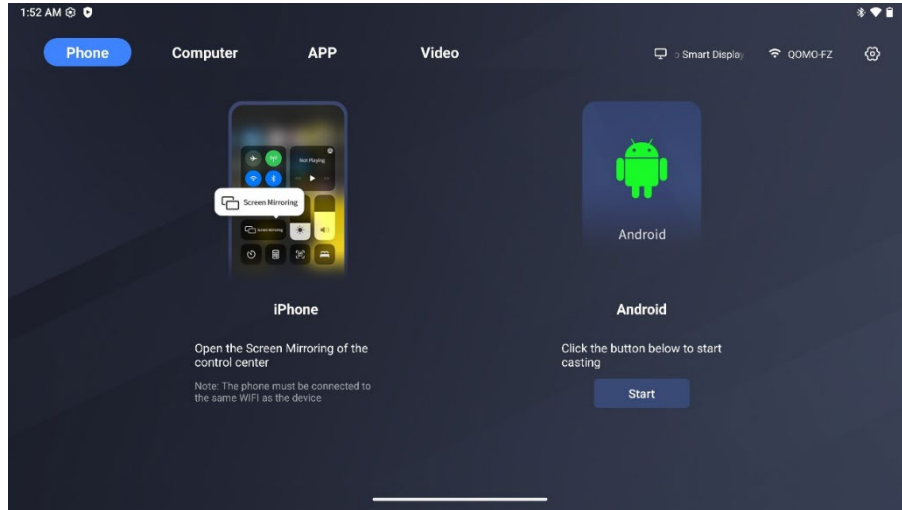

Kshare App (Android): Supports AirPlay, Miracast (Android/Win) and website casting. Click the corresponding button based on your target casting device type. You will get casting guides and software download options.

2. Connecting computer through HDMI or USB Type-C Port

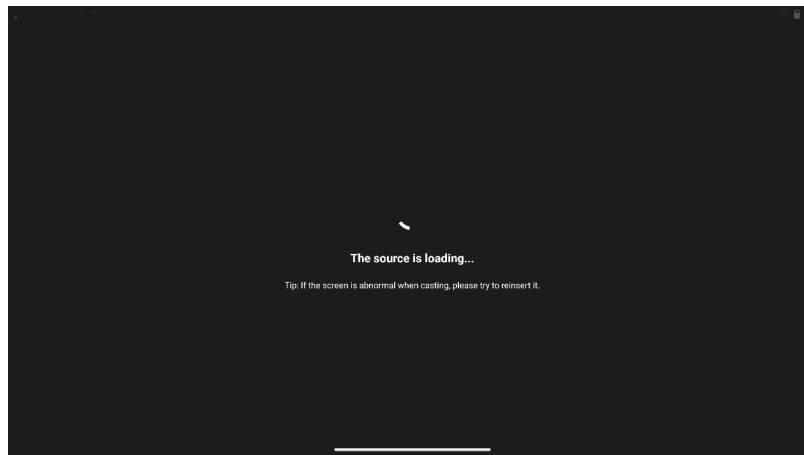

The mobile screen can be used as a display with HDMI and Type-C ports on the back; the system will automatically pop up a prompt asking if you need to jump to the input source interface to display the input device's screen when connected. You can also manually open the Signal Source APP to view the input source screen.

Note: There is no touch back feature. The only way to get touchback is through wireless casting with Kshare

ENJOY YOUR WANDERBOARD 32

For Additional Help

Contact us at support@qomo.com

or 248-960-0985

Visit us at www.qomo.com for training videos and more!