

QCamera User Manual

For Mac OS

V2.1

02/02/2022

Information in this manual is subject to change without notice

Software Download

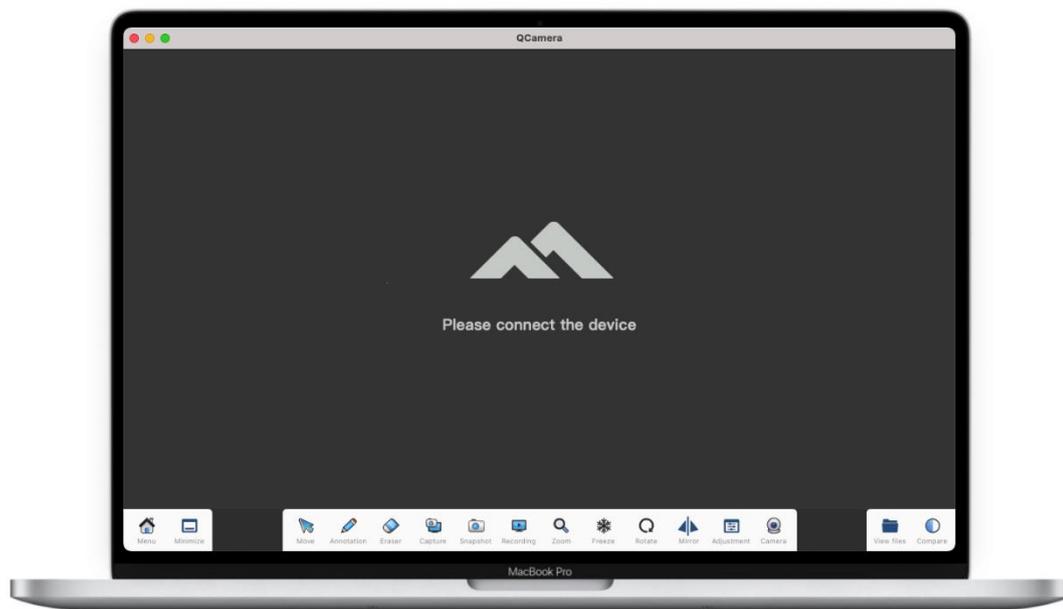
Search for Qomo QCamera in the Mac App Store and download.

OR Go to www.qomo.com/QCamera

Software Operation

The software consists of two parts:

- Camera Display Area
- Toolbar



1. Camera Display Area

The default camera will be displayed in this area and can be edited using tools in the toolbar.

2. Toolbar



Icon	Menu	Description
------	------	-------------

	About		Check software version and related QOMO information
	Language		Set Chinese/English
	Exit		Exit software
	Minimize	Minimize the software	
	Move	Selection tool	
	Annotate	Annotate/ Select pen color and thickness	
	Eraser		Erase annotation
	Clear		Clear annotation
	Full Screen Capture		Screen shot
	Region Capture		Screen snip
	Photograph	Take photo	
	Record Screen		Record the whole screen
	Record Camera		Record live video
	Zoom In/Out	Zoom In/Out	
	Freeze	Freeze image	
	Rotation	0°/90°/180°/270° rotation	
	Mirror	Mirror image	
	Adjust	Adjust the brightness, contrast, saturation, focus and focal length	
	Camera	Choose camera and resolution	
	View files	View photos and videos or open local files	
	Split	Split the screen in two vertical parts for comparing live image with captured picture	

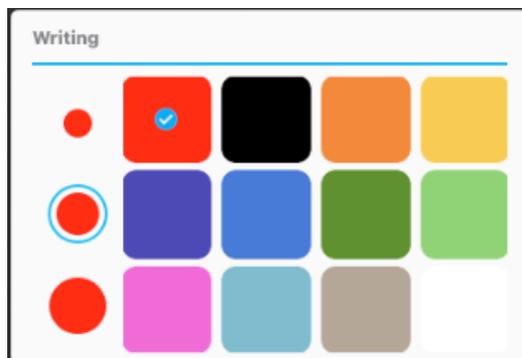
Note:

1. Recording, zoom, freeze, rotate, mirror, adjust, split features are only available when document camera is connected.
2. When freeze is selected, zoom, rotate, mirror, and adjust are not available.

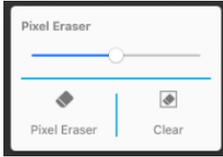
3. Main function introduction:

3.1 Annotate

Click  icon to annotate over the live image. Pen thickness and color can be changed by clicking on the icon. Note the default color is red.



3.2 Pixel Eraser

Click  →  →  to erase the annotation. Move the Horizontal bar to adjust eraser size. Select  to clear all annotation at once.

3.3 Capture

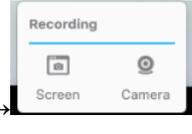
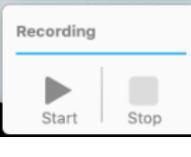
Click  to capture your screen fully or partially.

Full screen capture: Click , the full screen will be captured and saved locally.

Region capture: Click , to capture selected region, click  to save the capture.



3.4 Record

Click  →  →  →  →  to start recording video (select recording screen or camera image). On the left corner, there will be a window  to show recording time, pause or stop recording. The video will be saved in locally. You can open it through your file explorer or from the software.

3.5 Freeze

Click  icon to freeze live image. The icon will become blue. Click it again to unfreeze.

3.6 Camera

Click  →  , choose appropriate camera and resolution.

Note: Software will save the last resolution chosen.

Troubleshooting

Troubles	Cause	Solution
No image	Poor connection	Check if the USB power cable is connected and the LED light is illuminated.
Poor focus	<ol style="list-style-type: none">1. Not enough light or too much light or2. Object beyond focus3. Dirt on camera lens	<ol style="list-style-type: none">1. Turn on/off Lamp Light and move camera slightly to refocus.2. Use cloth to clean the camera lens
No video shown after application starts or after the device is selected	Document Camera is being used in another program	Re-connect the USB and choose the device Restart software Close other software device is being used in
Video is not smooth	Computer configuration might be low	Change the Camera to lower definition
Blur image	Focus is in manual mode	Change to auto mode in the Focus Menu